

120-
100-
80-
60-
40-
20-
0-



DRAINAGE
EXISTING
CONDITIONS

Karen Longteig
APRIL 2008

CONNECT
OVERFLOW
TO CHAMBERS

BARNES PLACE

TIE IN TO 12" ϕ PIPE PUT IN 2010
6" PERF ~~PIPE~~ PVC MIN. 6" BELOW
FLOOR.


POROUS
PAVING

DRIVEWAY

DRIVEWAY

A.D. TYP.

GET
DOWN
TO FIX
DRAIN
LINE
TO
STREET.

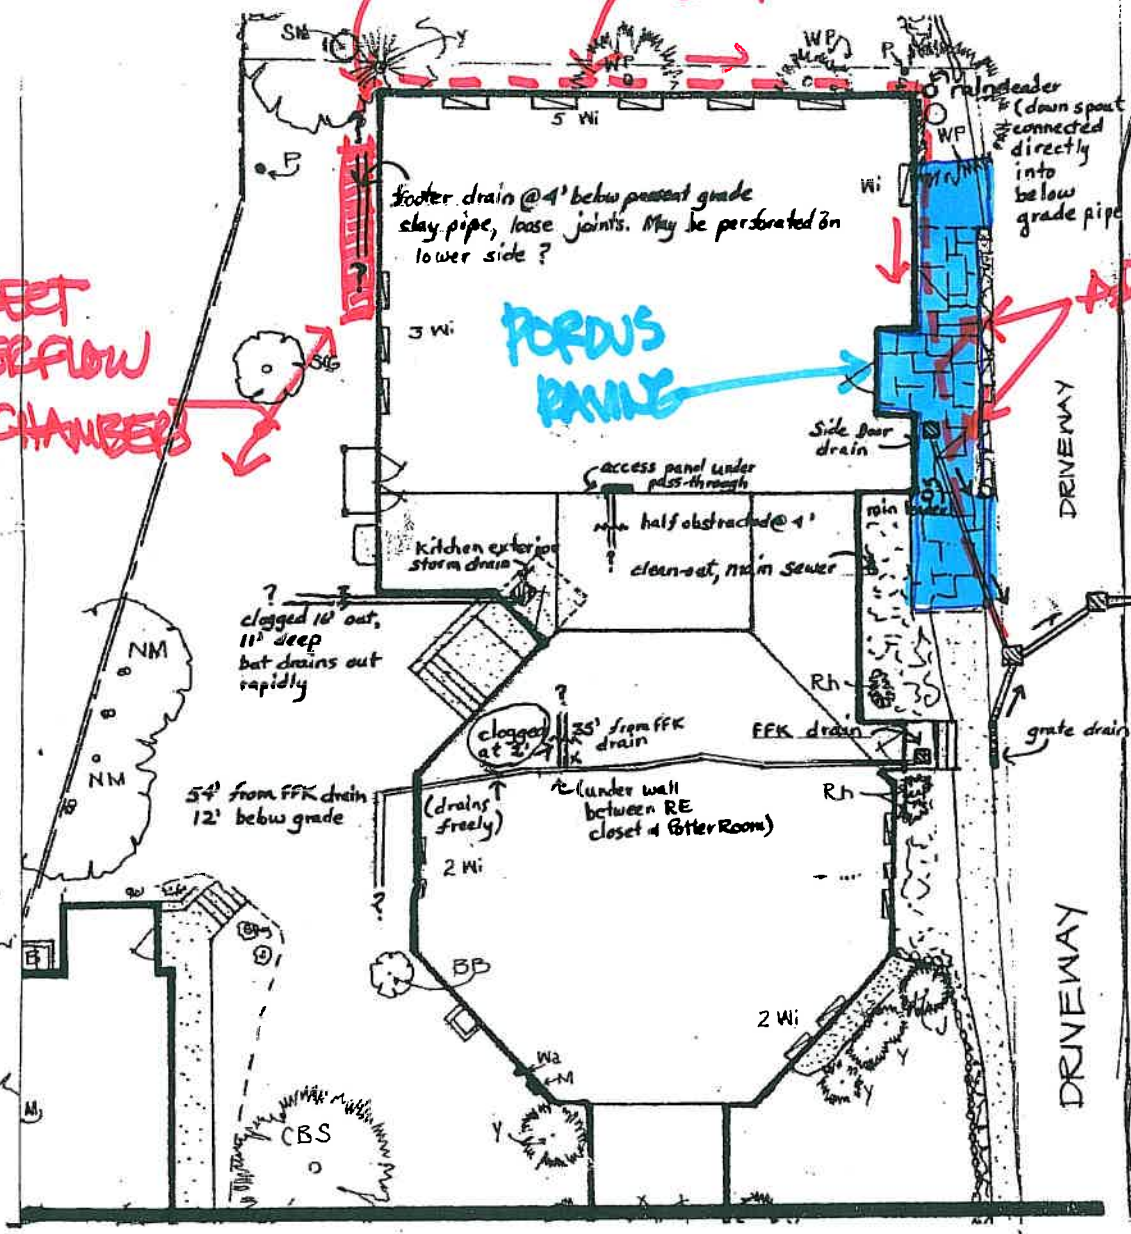

Footer drain @ 4' below present grade
slay pipe, loose joints. May be perforated on
lower side?

Indeader
(down spout
connected
directly
into
below
grade pipe

Side door
drain

access panel under
pass-through

half obstructed @ 4'
clean-out, main sewer

Kitchen exterior
storm drain

?
clogged 10' out,
11' deep
but drains out
rapidly

?
clogged
at 2'

35' from FFK
drain
(drains
freely)

54' from FFK drain
12' below grade

FFK drain

(under wall
between RE
closet & better room)

grate drain

? clogged at
4-5' into lawn

LAWN